

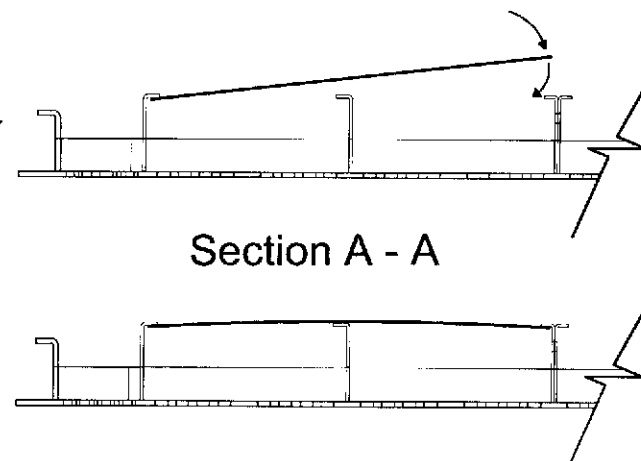


NARROW WEB ON PANEL "A" TO BE INSTALLED IN A CONSISTENT DIRECTION



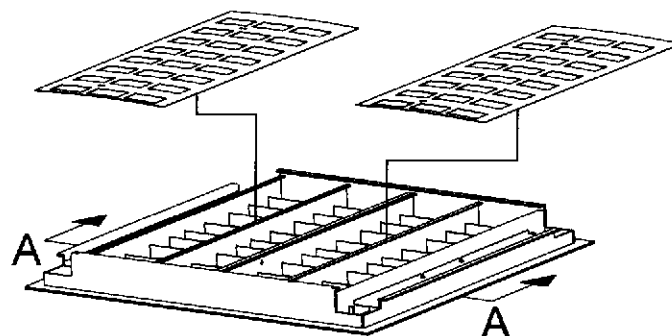


Section A - A

STEP 1- Install (2) large slide damper plates "A" into channel track by bowing/flexing plates as shown.

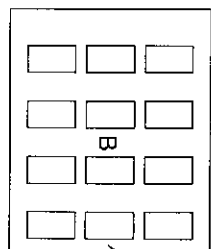

***NOTE:** NARROW WEB ALWAYS TO CENTER OF FRAME

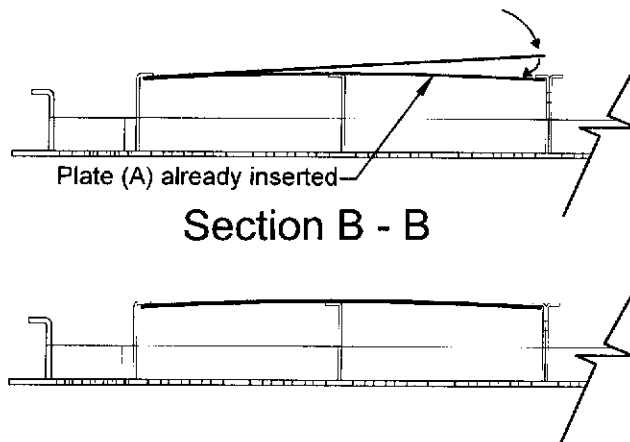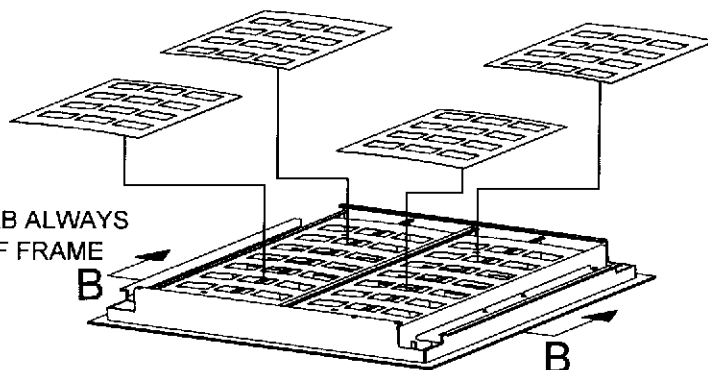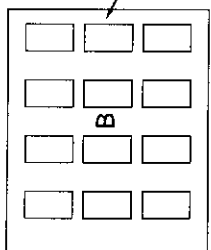

Section B - B

STEP 2- Install (2) small damper plates (B) over top of each large plate using same bowing/flexing motion.

***IMPORTANT NOTE-** Make sure these plates are flexed into track in orientation shown to enable proper slide adjustment and effective air volume control. The second plate must overlap the first plate, after both small plates (B) are installed, spread them apart until they separate and "lock" into a fixed (non-slide) position inside of track.

INFINITY® AIR GRATE

by Opstock, Inc.

**SLIDE DAMPER
(INSTALLATION)**